



Tiger 900 Mobil Bracket

code 309021




Flathead
M6x30




309021 A

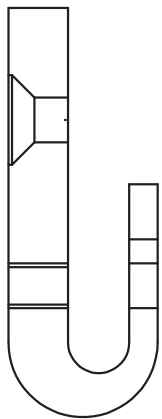


309021 B

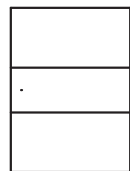


309026 B




309026 BC

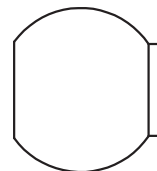


309026 BB

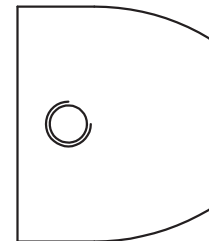

309023 C

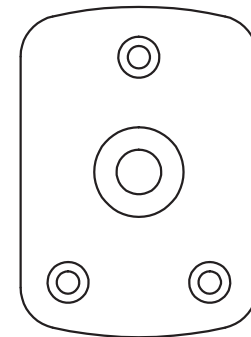

Flathead
M6x20



Buttonhead
M6x20

