



L.E.D. TRUNK LID HANDLE 3215

FOR GL1800

FITS: ALL HONDA '01-UP GL1800 MODELS (THIS PRODUCT WILL INSTALL WITH HONDA'S SPOILER AND KURYAKYN OR SIMILAR LUGGAGE RACKS)

PARTS INCLUDED

- 1 Trunk Handle
- 1 Wire Harness
- 1 3-Pin Female Connector
- 1 Hardware Kit, including:
 - 2 Handle Pad
 - 4 M5 x 0.8 x 30MM Phillips Head Pan Machine Screw (PHPMs)
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Phillips head screwdriver, 7/32" drill bit, drill


STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Park the motorcycle on a hard, level surface; turn off the ignition.

STEP 2 Open the top trunk lid and remove the plastic underside of the lid by removing the 13 screws shown in PIC.1.

STEP 3 Remove the four latch hook screws (See PIC.1); gently pull the underside of the lid out.

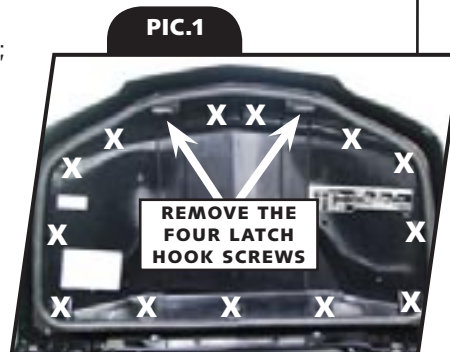

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



STEP 4 Disconnect the multi-pin connector and set the lid aside. See [PIC.2](#).

STEP 5 Drill the four latch hook screw bosses out with a 7/32" drill bit. Ensure that you follow the angle of the boss. Drill all the way through the lid. See [PIC.3](#).

ATTENTION! This procedure requires making permanent modifications to the trunk lid; this may void your warranty. Consult your dealer for more information.

STEP 6 With the same drill bit, drill a hole in between the two right side bosses for the Trunk Lid Handle brake light wire to pass through.

STEP 7 Route the brake light wires through the large slot in the included Handle Pad and into the hole in the trunk lid from STEP 6. See [PIC.4](#). Ensure that the Handle Pad is oriented as shown.

STEP 8 Place the other Handle Pad under the Lid Handle; temporarily secure the Handle in place with non-marking masking tape until it can be fully installed.

CAUTION! Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.

STEP 9 Locate the stock accessory brake light connector. There will be ground (green) and brake power (green with red tracer) wires coming from the white connector. See [PIC.5](#).

STEP 10 Plug the male connector from the included wiring harness into the accessory connector from STEP 9. See [PIC.5](#).

STEP 11 Locate the included 3-Pin Female Connector.

STEP 12 Connect the included female connector to the small white connector from the wiring harness. See [FIG.1](#).

STEP 13 With the female connector connected to the wiring harness, determine to which side the power lead and ground lead will connect. See [FIG.1](#).

STEP 14 Push the terminal from the white wire (from the Trunk Lid Handle) into the connector across from the white (from the wiring harness). See [FIG.1](#).



NOTE Ensure that the tabs on the terminals are oriented to fit in the slots in the connector. Improper installation may ruin the terminals.

PIC.2



DEPRESS THE TAB AND PULL OUT

PIC.3

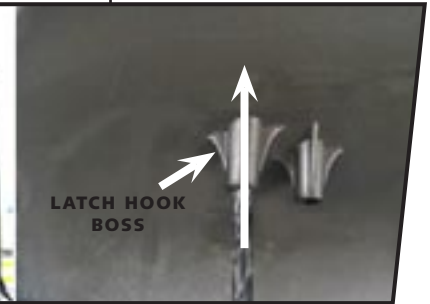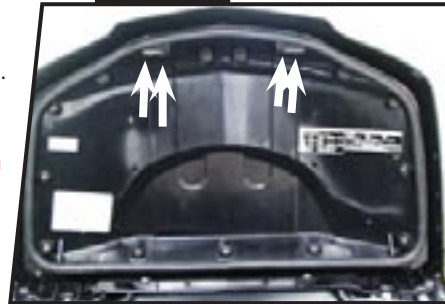

LATCH HOOK BOSS

PIC.4




HANDLE PAD

PIC.5



FIG.1

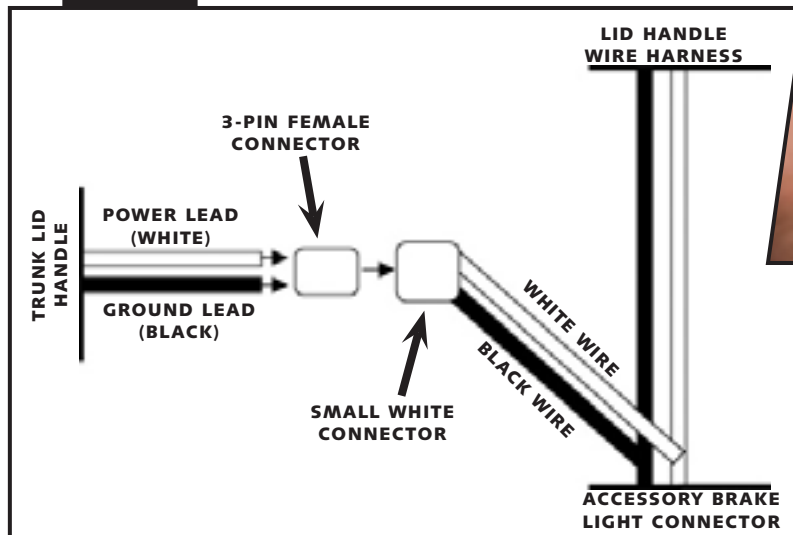

STEP 15 Push the terminal from the black wire (from the Trunk Lid Handle) into the connector across from the black wire (from the wiring harness). See [FIG.1](#).

STEP 16 Turn the ignition on and test for the proper function of the brake light; turn the ignition off when you are done testing.

STEP 17 Reinstall the plastic underside of the lid in the reverse order it was removed. Do not install the latch hooks at this point.

ATTENTION! Secure all wiring away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT warranty any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

STEP 18 Remove the masking tape from STEP 8; hold the handle in place.

STEP 19 Attach the latch hooks through the trunk lid into the Lid Handle with the four included M5 x 0.8 x 30mm (PHPMS). Do not fully tighten the fasteners until all of them have been installed.

STEP 20 Ensure that the trunk lid closes and locks properly before operating the motorcycle.

ATTENTION! The brake light is intended to be used as a supplemental brake light only. Any other use may be in violation of Federal, State or local regulations.

STEP 21 Ensure proper clearance and operation before riding the motorcycle.

Ride On!