



CRUISE PEGS FOR EARLY XL 7869

FITS: LATE '84-'03 SPORTSTER WITH OR WITHOUT FORWARD CONTROLS. ACCEPTS MALE MOUNT PEGS (SOLD SEPARATELY)

PARTS INCLUDED

- 1 Cruise Peg Bar
- 2 Outer Clamp
- 1 Inner Clamp
- 1 Bracket
- 1 Right Side Clevis
- 1 Left Side Clevis
- 1 Hardware Kit, including:
 - 2 3/8-16 x 1 Socket Head Cap Screw (SHCS)
 - 6 5/16-18 x 1 SHCS
 - 4 Wave Washer
 - 2 3/8-16 x 1-1/2 SHCS
 - 1 1/4-20 x 2 Flat Head Cap Screw (FHCS)
 - 1 Cable Tie
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of hex wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

-cont.-

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Küryakyn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Küryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Küryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Küryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA All Rights reserved.



WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

Küryakyn

STEP 2 Maneuver the Bracket behind the frame down tubes; position the Bracket behind the welded crosspiece. See [PIC.1](#) and [PIC.2](#).

STEP 3 Position the Inner Clamp so the dimple on the face of the clamp is on the upper left side (when viewed from the front of the bike). See [PIC.3](#). Insert the included 1/4-20 x 2 FHCS through the Inner Clamp, welded crosspiece, and into the threaded hole in the Bracket. See [PIC.3](#). Leave the screw finger tight for now.

STEP 4 Insert the two 3/8-16 x 1-1/2 SHCS through the Inner Clamp and into the threaded holes in the Bracket. See [PIC.3](#). Leave the screws finger tight for now.

STEP 5 Align the Inner Clamp and Bracket then tighten the screws from STEP 3 and STEP 4.

STEP 6 Position the Cruise Peg Bar in the Inner Clamp.

STEP 7 Place an Outer Clamp over the Cruise Peg Bar. Ensure that the clamp is oriented as shown in [PIC.4](#). One side of the clamp is longer than the other.

ATTENTION! Determine the mounting location and orientation of the Cruise Peg Bar before fully tightening the clamps. The clamps may leave marks when tightened down.

STEP 8 Secure the Outer Clamp to the Inner Clamp with two 5/16-18 x 1 SHCS; leave the screws snug to allow for adjustment of the Cruise Peg Bar.

STEP 9 Install the other Outer Clamp and secure with the other 5/16-18 x 1 SHCS; leave the screws snug to allow for adjustment of the Cruise Peg Bar.


STEP 10 Adjust the Cruise Peg Bar for comfort and clearance; tighten the screws from STEP 8 and STEP 9. Tighten the top screws first, then the bottom screws.

WARNING! IMPROPER INSTALLATION OR USE OF THIS PRODUCT COULD RESULT IN SERIOUS INJURY OR DEATH.


CAUTION! Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.


PIC.1

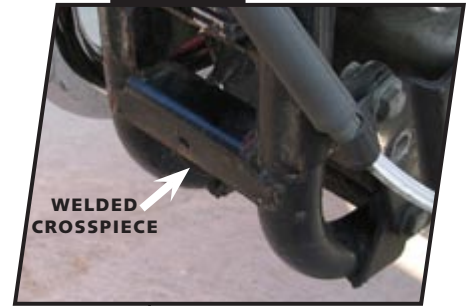

PIC.2

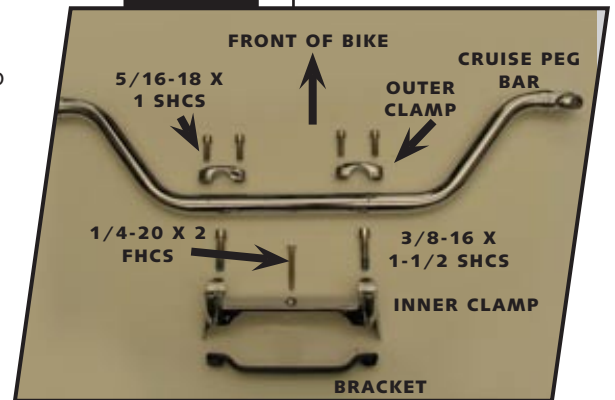


PIC.3

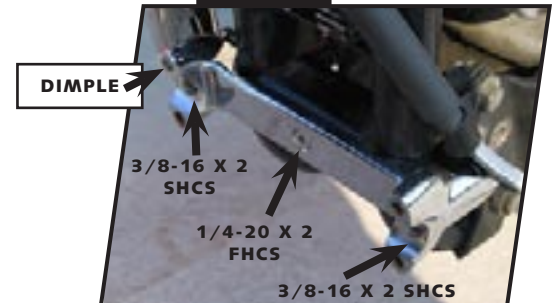

-cont.-

PIC.4

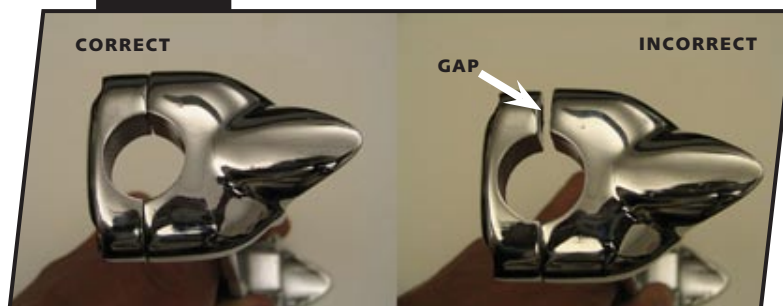

PAGE
2

CRUISE PEGS INSTALLATION



STEP 11 Locate the Right Side Clevis. The footpeg stop will be on the top side and the hole for the 3/8-16 x1 SHCS will face rearward when installed correctly. See [PIC.5](#).

STEP 12 Hold the clevis against the splined end of the Cruise Peg Bar at the desired angle and secure it with a 5/16-18 x 1 SHCS. See [PIC.5](#). Tighten the screw; ensure that the splines on the clevis and bar fully engage.

STEP 13 Repeat STEP 11 and STEP 12 for the left side.

STEP 14 Install the footpegs (sold separately). Secure the footpegs to the clevises using the included 3/8-16 x 1 SHCS and wave washers. Insert the wave washer as shown in [PIC.6](#). Refer to the instructions included with the footpegs for more information.

STEP 15 Ensure proper clearance and operation before riding the motorcycle.

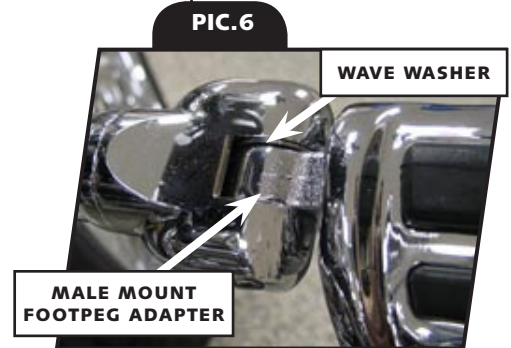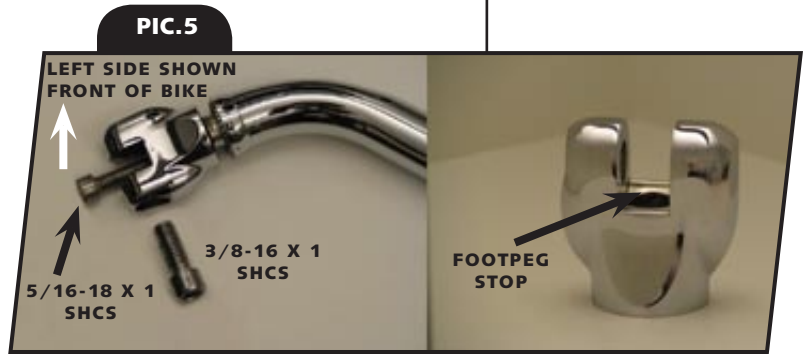

Ride On!