



INSTALLATION

REAR MUD FLAPS for H-D TRIKES

7220

PARTS INCLUDED

- 2 Mud Flap Tips
- 2 Mud Flap Assemblies
- 2 Back Plates
- 2 Templates
- 1 Hardware Kit Containing:
 - 6 #8-32 X 1/2" Hex Head Cap Screws
 - 6 #8 Lock Washers
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

TOOLS SUGGESTED

Set of Hex Wrenches, Center Punch, Drill and Drill Bits, Masking Tape, Tape Measure

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 Using masking tape, cover the bottom portion of each fender. PIC 1

STEP 3 Using the tape measure, measure the rear of the fender. Using a non-permanent marker, mark the center of the bottom of the fender. PIC 2 Repeat for the other fender.

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Küryakyn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Küryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Küryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Küryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.

-cont.-

7220-1HD-0412

kuryakyn.com



STEP 4 Line up the notch in the bottom of the template with the mark from Step 3. Line up the bottom of the template with the bottom edge of the rear fender. Secure the template with masking tape. PIC 3 Repeat for the other fender.

NOTE: Now step back from the Trike and look to make sure the templates are lined up correctly side to side and top to bottom. Make any needed adjustments to the templates.

STEP 5 Mark the center of the three holes in each template on the each fender with a center punch. PIC 3

NOTE: If replacing Harley Davidson mud flaps on the Trike, the bottom two holes on each template should line up with the existing holes.

CAUTION! **MEASURE TWICE – DRILL ONCE.** Double check all reference marks made on the rear fenders **BEFORE** drilling. Kuryakyn will not be responsible for incidental or consequential damages resulting from this installation.

CAUTION! To prevent the tire from being punctured, place something (small piece of wood) between the tire and fender.

STEP 6 Using a 3/16" inch drill bit, carefully drill out all six holes. Carefully enlarge each hole starting with a 1/4" bit, then a 5/16" bit and finish with a 3/8" bit.

STEP 7 Remove the templates and masking tape from each fender.

NOTE: Kuryakyn recommends applying a clear coat (such as clear fingernail polish) around the edges of the holes to help prevent paint chipping.

STEP 8 Place one of the included Rubber Mud Flaps over the screw dowels on one of the Rubber Mud Tips. Make sure all three dowels protrude through the Rubber Mud Flap. PIC 4

STEP 9 Place one of the included #8 Lock Washers on one of the supplied #8-32 X 1/2" Hex Head Cap Screws and insert them through the top hole of one of the Back Plates. PIC 5 Place the Hex Screw/Back Plate behind the rear fender and insert the threads through the top hole drilled in the fender.







STEP 10 Thread the Hex Screw from Step 8 through the Rubber Mud Flap into the Mud Flap Tip. Leave finger tight for now.

STEP 11 Place an included #8 Lock Washer on two #8 Hex Screws and insert one of them into each bottom hole of the Back Plate, through the fender and Rubber Mud Flap and thread them into the Mud Flap Tip. Leave finger tight for now. Repeat Steps 8-10 for the other side.

ATTENTION! Determine the mounting location and orientation of the Mud Flap before fully tightening the fasteners. The Mud Flaps may leave marks when tightened down.

STEP 12 Align each Mud Flap and tighten securely.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

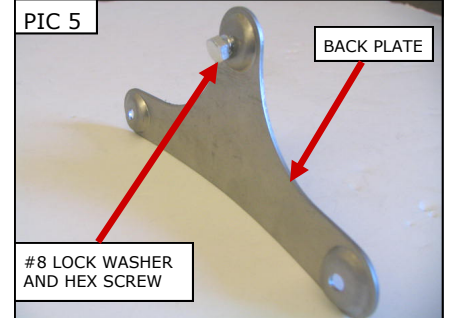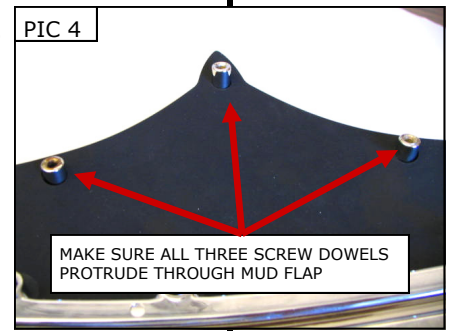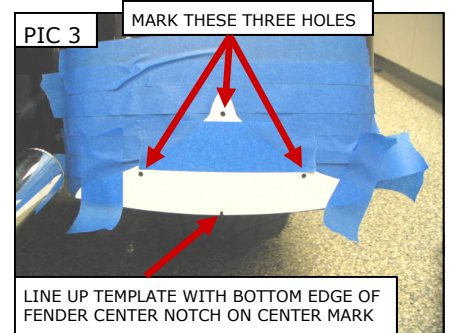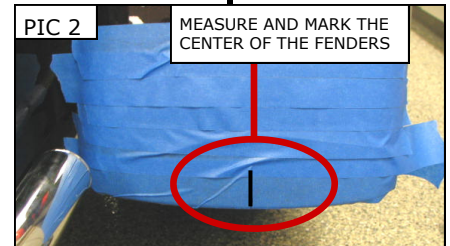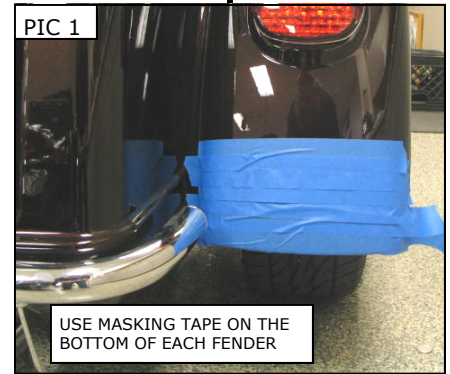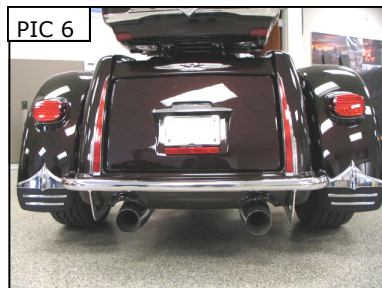

Ride On!