




## Custom Dynamics® Harley Davidson® Wiring Adapter Installation Instructions

We thank you for purchasing the Custom Dynamics® Harley Davidson® Wiring Adapter. Our products utilize the latest technology and highest quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

**Part Numbers: MPR-BCM**

### Package Contents:

- HD BCM Wiring Adapter

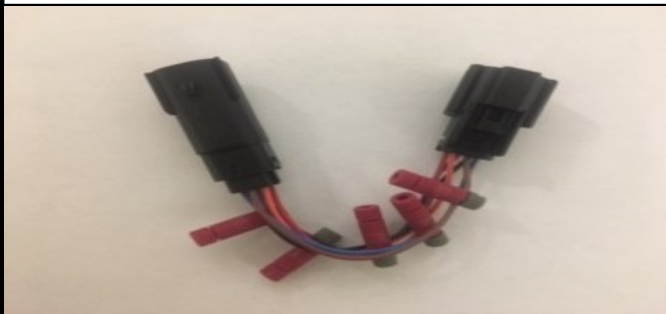

**Fits:** 2014-2020 Harley-Davidson® Road King®, Street Glide®, Road Glide®, Electra Glide®, and Ultra touring models (including CVO™ models).



## ATTENTION



Please read all Information below before Installation

**Warning:** Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

**Safety First:** Make sure the bike is parked on a level surface and bike's mechanical components are cool to the touch.



### Installation:

1. Locate connector for Rear Harness under Seat.
2. Unplug connectors and plug in Adapter.
3. Connect wires as needed using Posi-Taps.

Black—Ground

Blue— Running

Red— Brake

Brown—Right Turn/Brake

Purple—Left Turn/Brake

Orange—Aux Power

4. Check operation of all lights.
5. Re-install seat.

**Posi-Tap™**  
TAP CONNECTOR

**QUICK & EASY**

- 1 Insert Hot Wire
- 2 Tighten
- 3 Strip Leads
- 4 Insert & Tighten

• TAPS WIRES WITHOUT CUTTING  
• TOTAL WIRE INTEGRITY IS MAINTAINED  
• INSTALLS IN SECONDS BY HAND  
• NO CRIMPING OR TOOLS REQUIRED  
• REUSABLE OR PERMANENT  
• LESS RESISTANCE  
• VIBRATION PROOF  
• FULLY INSULATED

POWERS UP TO (4) LEADS AT ONCE!

NO CRIMPING  
NO TOOLS NEEDED

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST