

**RAHMENABDECKUNG LINKS**  
**FÜR HARLEY-DAVIDSON SPORTSTER-MODELLE (2021-)**




**PACKLISTE:**


<b>Menge</b>	<b>Beschreibung</b>
1	Rahmenabdeckung
1	Linsenkopfschraube M6*12
1	Rahmenabdeckblech
2	Klebestreifen

## MONTAGEANLEITUNG:


Lösen Sie die Schraube (2) und entfernen Sie die obere Tankattrappenabdeckung (4).

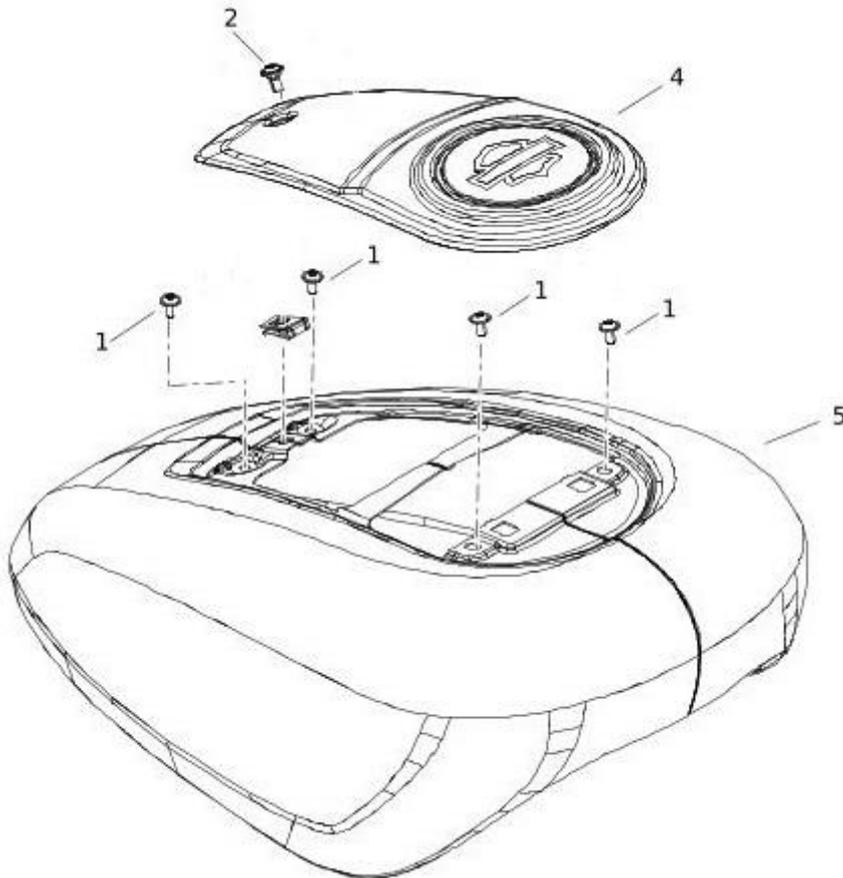

Lösen Sie die vier Schrauben (1) und entfernen Sie komplette Luftfilterkasten-Abdeckung (5).

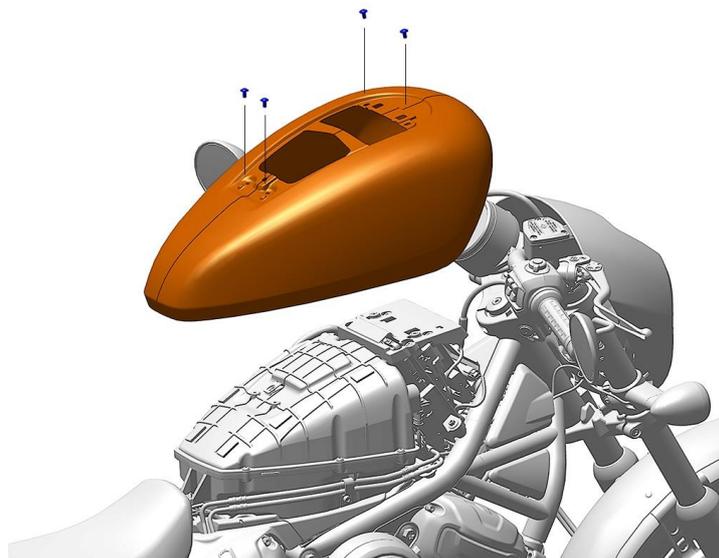


Entfernen Sie die untere Rahmenabdeckung vorne links (4) und entfernen Sie ebenfalls den Gummistopfen (2). Das Gummi wird nicht weiterverwendet!

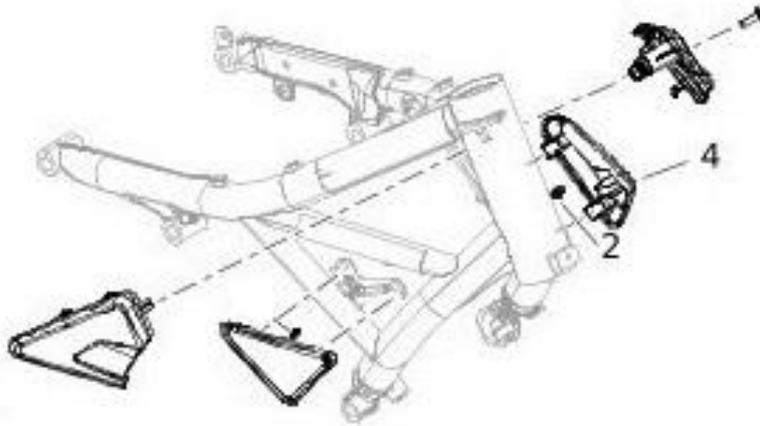

Lösen Sie die vordere Bremsleitung vom Bremssattel und verlegen Sie die Bremsleitung auf der Innenseite des Rahmens.

Verlegen Sie außerdem noch die Schläuche der Motorentlüftung und des Aktivkohlefilters (A) auf die Innenseite des Rahmens.

**Achtung:** Verlegen Sie die Leitung und Schläuche so, dass diese weder geknickt noch eingeklemmt werden!

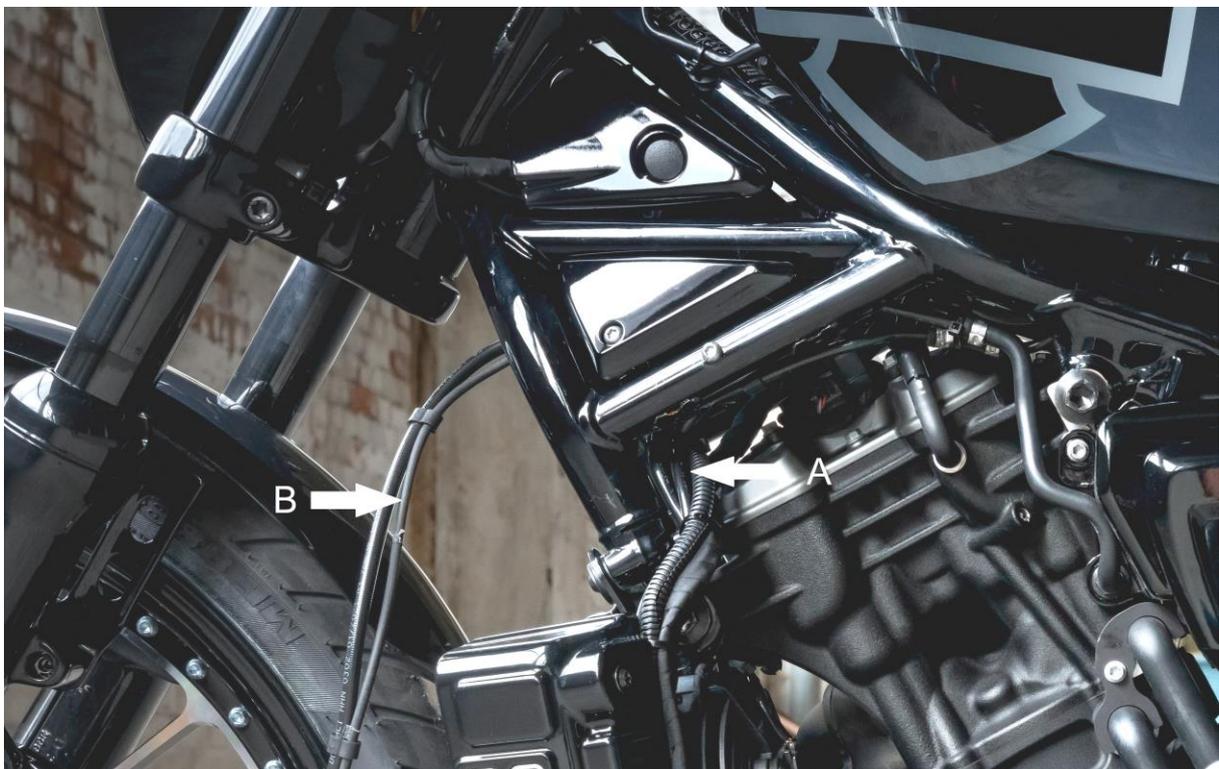

In diesem Zuge kann auch das Kabel des ABS-Sensors (B) verlegt werden. Dieses hat einen Steckverbinder unter der oberen linken Rahmenabdeckung.

Montieren Sie die neue TB-Rahmenabdeckung mit der beiliegenden Linsenkopfschraube M6\*12.

Montieren Sie das Abdeckblech mit den beiliegenden Klebestreifen über den alten Befestigungslaschen am Rahmen.

Montieren Sie die Abdeckung des Luftfilterkastens sowie die obere Tankattrappenabdeckung in umgekehrter Reihenfolge.

Entlüften Sie das vordere Bremssystem und überprüfen Sie die Funktion der Bremsanlage auch nochmal nach der ersten Probefahrt!

Das Thunderbike-Team wünscht viel Vergnügen.  
Gute Fahrt!



Thunderbike  
Güterstrasse 5  
D-46499 Hamminkeln  
Telefon (0049) 2852 - 6777 -33  
Telefax (0049) 2852 - 5444  
info@thunderbike.de

**LEFT FRAME COVER**  
**FOR HARLEY-DAVIDSON SPORTSTER MODELS (2021-)**




**PACKING LIST:**


<b>Amount</b>	<b>Item</b>
1	Frame cover (triangular)
1	Lens head screw M6*12
1	Frame cover (stripe)
2	Adhesive strip

**MOUNTING INSTRUCTIONS:**


Losen the screw (2) and remove the upper dash cover (4).

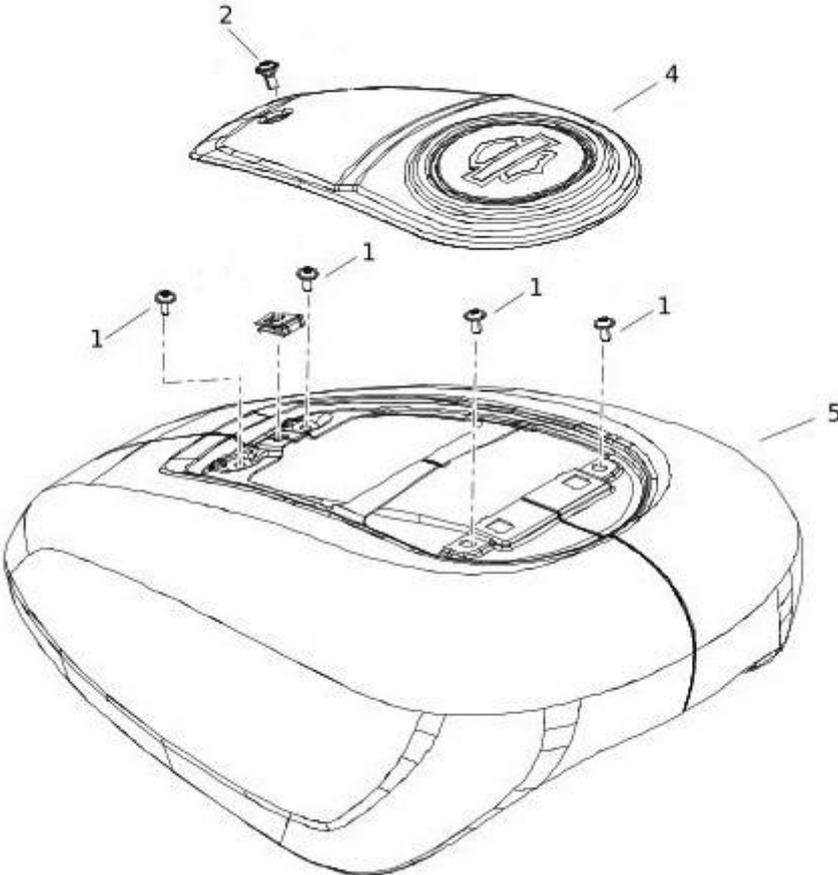

Losen four screws (1) and remove the whole airbox cover (5).

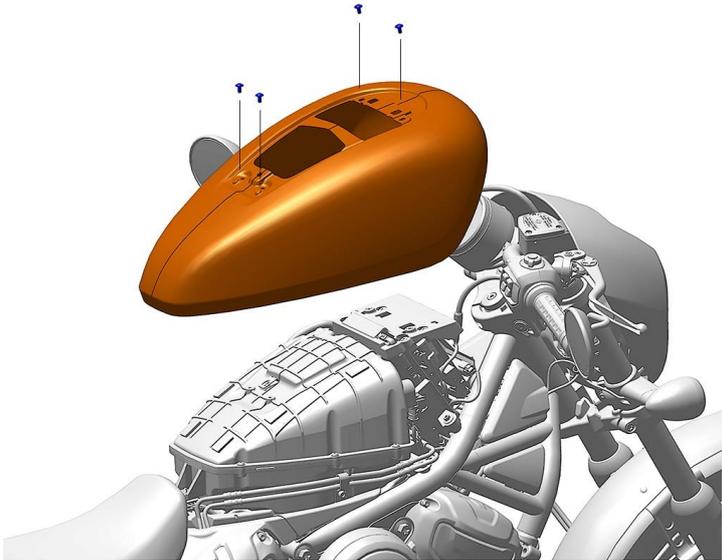


Remove the lower front frame cover on the left side (4) and also remove the rubber mount (2). The rubber mount will not be required further!

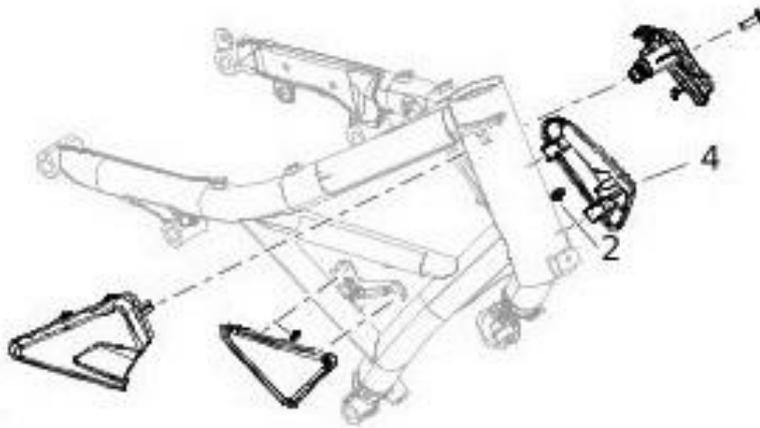

Losen the front brake line from your front brake caliper and relocate the line on the inner side of the frame.

Also relocate the breather hoses of the engine ventilation and the activated carbon filter (A) to the inner side of the frame.

**Attention:** Relocate the brake line and breather hoses in a way they won't get crimped or damaged during a ride!

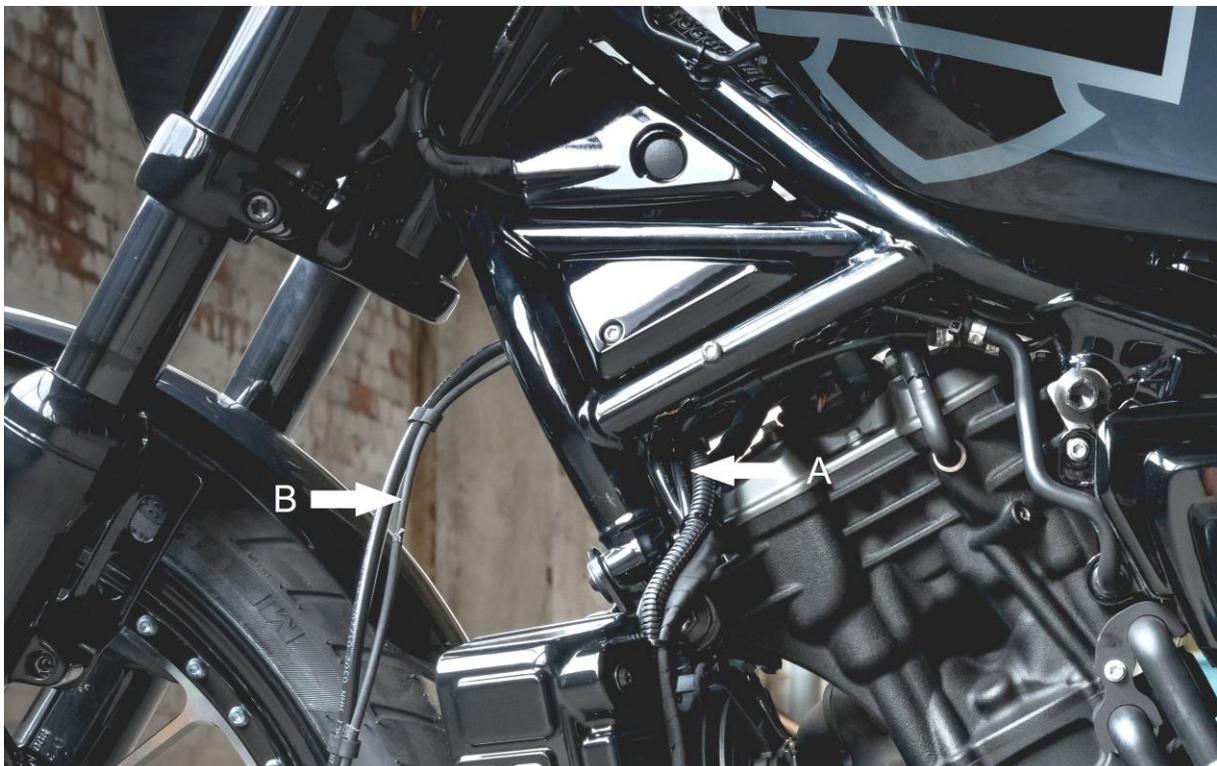

With this step you can also relocate the ABS sensor wire (B) to the inner side of the frame. There is a wiring connector underneath the upper left frame cover.

Install the new TB frame cover using the included lens head screw M6\*12.

Install the stripe frame cover to the oem mounting points using the included adhesive stripes.

Install the airbox cover and the upper dash cover in reverse order.

Vent and check the front brake system and also check the system after the first test ride!

The Thunderbike team wishes you fun with your new parts.  
Have a nice and safe ride!



Thunderbike  
Güterstrasse 5  
D-46499 Hamminkeln  
Telefon (0049) 2852 - 6777 -33  
Telefax (0049) 2852 - 5444  
info@thunderbike.de