



## FOOTBOARD EXTENDERS

## 450

**FITS: '92-UP ROAD KINGS AND DRESSERS. WILL NOT WORK ON MODELS EQUIPPED WITH H-D P/N 99002-97 – "CHROME DISPLAY STAND"**

### PARTS INCLUDED

- 1 Spacer Plate — Six Holes
- 3 1/2" I.D. Round Spacer
- 2 5/16"-18 x 1-3/4" H.H.C.S. — Stainless Steel
- 3 1/2"-13 x 1-3/4" S.H.C.S. — Stainless Steel
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

### THANK YOU FOR CHOOSING KÜRYAKYN!

#### PLEASE NOTE

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

#### TOOLS SUGGESTED

1/2" Combination and socket wrenches, 3/8" Allen wrench, Bike lift, or blocks to hold bike upright without kickstand

#### PROCEDURE

**STEP 1** Place the bike on a suitable stand, or block the bike up securely so the kickstand will not be required.

#### RIGHT SIDE:

**STEP 2** Remove the footboard with the mounting brackets as a unit. A 3/8" Allen wrench or Allen socket will be required. Remove the large split lock washers from the stock bolts and set them aside as they will be re-used.


**STEP 3** Find two 1/2"-13 x 1-3/4" socket head cap screws and round spacers from the hardware kit. Place one of the stock 1/2" I.D. split lock washers on each of the new longer Allen bolts. Insert these bolts where the shorter ones were removed, and install one spacer on each of these new bolts. See PIC.1.

**STEP 4** Reinstall the footboard assembly on the new bolts with the spacers in place. Adjust the height as you desire. Tighten securely.

#### LEFT SIDE:

**STEP 5** Remove the left side footboard assembly with the brackets intact. Save the stock split lock washers and nuts — they will be re-used.

-cont.-

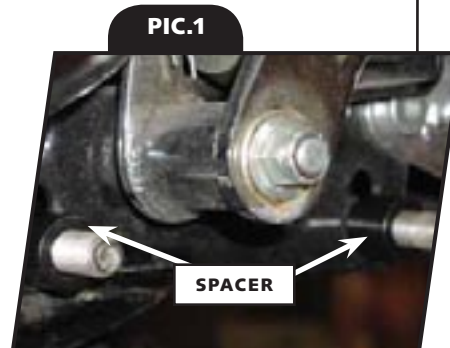

#### CUSTOMER SERVICE

877.370.3604 (toll free)

#### INSTALLATION QUESTIONS

techsupport@kuryakyn.com  
or call 715.247.2983

#### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

· Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).

· The product must be properly installed, maintained and operated under normal conditions.

· Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.

· Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.

· Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.

· Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.

· Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

#### ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



**STEP 6** See [PIC.2](#). Replace the original 1/2"-13 Allen bolt with one of the new longer ones included. The stock split lock washer will be re-used. Place the remaining spacer on this bolt as shown.

**STEP 7** See [PIC.3](#). Position the spacer plate as shown using the included 5/16"-18 x 1-3/4" hex head bolts and stock split lock washers, installed from the rear with the threads facing outward.


**STEP 8** Reinstall the footboard and bracket assembly in the same manner as it was removed. The stock 5/16" nut will be re-used. Adjust as desired. Tighten securely.

**NOTE** On some models, the 5/16"-18 x 1-3/4" hex heads bolt, stock split washer will be installed from the outside. See [PIC.4](#).

*Ride On!*

**Kuryakyn**

**PIC.2**

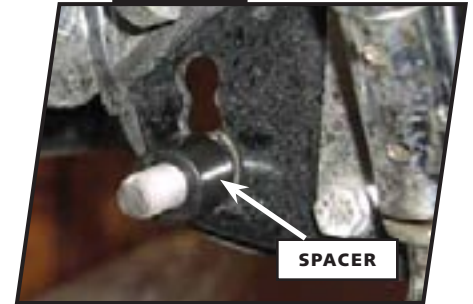

**PIC.3**



**PIC.4**



**PAGE**

**2**