

INSTALLATION

0 0 0 0

0 0 0 0

DRIVER FLOOR BOARD SPACER FOR TOURING

PARTS INCLUDED

- 1 Left Side Spacer (LH on spacer)
- 1 Right Side Spacer (RH on spacer)
- 2 Round Spacers
- 4 3/8" Lock Washers
- 2 3/8"-16 X 3-1/4" Socket Head Cap Screws
- 4 3/8"-16 X 2" Socket Head Cap Screws
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Hex Wrenches, Set of Combination Wrenches, Set of Hex Wrench Sockets, Ratchet and $\ensuremath{\mathsf{Extension}}$

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition and let cool.

NOTE: Left and Right sides are determined by sitting on bike.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

CUSTOMER SERVICE

7509

877.370.3604 (toll free)

INSTALLATION QUESTIONS techsupport@kurvakvn.com

or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

 Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).

> •The product must be properly installed, maintained and operated under normal conditions.

 Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.

 Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breech of contract or duty between Küryakyn and a customer.

 Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.

•Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Küryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

•Küryakyn makes no warranty of any kind in regard to other manufacturer¹s products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Küryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Küryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.

kuryakyn.com



-cont.-7509-22HD-0711 **STEP 2** Identify left and right spacers. Each of the large spacers are labeled. PIC 1


Küryakyn


- **STEP 3** Remove the socket head cap screw from the right front floorboard mount. Retain the locknut, it **will be reused**. The socket head cap screw and lock washer **will not be reused**. On CVO bikes, this comes in from the back side of the frame to the mount.
- **STEP 4** Insert one of the supplied 3/8"-16 X 3-1/4" Socket Head Cap Screws, with a provided Lock Washer, through the front mount and provided Round Spacer. Using the lock nut from Step 3, attach the front mount and Spacer to the frame. Finger tighten at this time. PIC 2

On CVO bikes: Insert one of the supplied 3/8"-16 X 2" Socket Head Cap Screws with a Lock Washer through the back side of the frame. Place one of the included Round Spacers over the protruding threads and thread the mount on. Leave finger tight for now.

- **STEP 5** Remove the socket head cap screw from the rear mount. Set aside, **it will not be reused**. Insert one of the supplied 3/8"-16 X 2" Socket Head Cap Screws, with a provided Lock Washer, through the rear mount and rear Right Side Spacer (this has an RH stamped on it) make sure that the indexing pin on the rear mount fits into the smaller hole on the Spacer, the cap screw goes through the larger hole. Attach the rear mount and Spacer to the bike. Make sure that the indexing pin on the spacer goes into the lower hole on the frame. PIC 3
- **STEP 6** Tighten both front and rear mounting screws securely.
- **STEP 7** Repeat Steps 3 through 5 for the Left side, using the Spacer that has an LH stamped on it, the Round Spacer and the two remaining supplied Socket Head Cap Screws and Lock Washers.
- **STEP 8** Tighten all fasteners securely.
- ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.



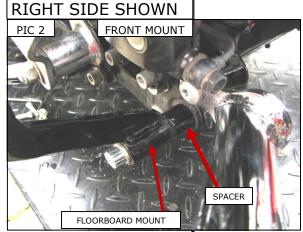

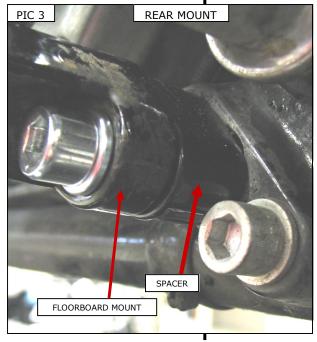

PAGE

Ride On!

DRIVER FLOOR BOARD SPACER

INSTALLATION