



7876

TRANSMISSION SHROUD SET

FITS: '07-UP TOURING MODELS (DRESSERS, ROAD KINGS, ROAD GLIDE, STREET GLIDE) WITH ORIGINAL EQUIPMENT HEAD PIPES

PARTS INCLUDED

- 1 Front Transmission Shroud
- 1 Rear Transmission Shroud
- 1 Hardware Kit containing:
 - 4 Stand-Off Studs 5/16"-18 x 1-1/4"
 - 1 1/4-20 x 3/4" Button Head Cap Screw (BHCS)
 - 4 10-24 x 3/8" Button Head Cap Screw
 - 4 5/16 Flat Washers
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

- WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.
- ATTENTION! Some applications will require loosening or removal of the exhaust for installation.
- **NOTE** It is the installers' responsibility to make sure all fasteners (including preassembled) are tightened before operation of motorcycle. Küryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

TOOLS SUGGESTED

Set of hex wrenches, set of combination wrenches or socket/ratchet set, torque wrench.

PROCEDURE


STEP 1 Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

STEP 2 Remove the stock fastener that is in the location marked "A" in PIC.1.

STEP 3 Install an included stand-off stud with a flat washer in location "A"; torque to 13-18 ft. lbs.

STEP 4 Remove the stock fastener in location "B"; install an included stand-off stud with a flat washer in location "B". Torque to 13-18 ft. lbs.

STEP 5 Loosen the heat shield clamp that is just above the transmission case. See <u>PIC.1</u>.

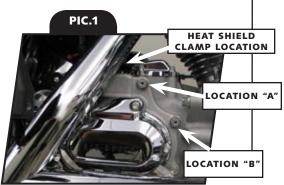

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

 Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).

• The product must be properly installed, maintained and operated under normal conditions.

• Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.

 Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breech of contract or duty between Küryakyn and a customer.

> Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.

 Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Küryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.

 Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today-select the "CATALOGS" icon. Each Küryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Küryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA All Rights reserved.



STEP 6 Slide the Front Transmission Cover into place; first, slide the bottom of the cover behind the exhaust then pivot the cover in until it locates over the stand-offs.

NOTE It may be necessary to push the heat shield clamp out of the way to ease installation.

STEP 7 Remove the stock fastener that is in the location marked "C" in <u>PIC.2</u>.

STEP 8 Install an included stand-off stud with a flat washer in location "C"; torque to 13-18 ft. lbs.

STEP 9 Remove the stock fastener in location "D"; install an included stand-off stud with a flat washer in location "D". Torque to 13-18 ft. lbs.

STEP 10 Slide the Rear Transmission Cover into place; slide the cover behind the exhaust until it locates over the stand-offs.

NOTE Temporarily removing the fastener securing the wire clamp, shown in <u>PIC.3</u>, will ease installation. Ensure that the fastener is replaced after the cover has been secured in place.


STEP 11 Secure the two covers together with the $1/4"-20 \times 3/4"$ BHCS; loosely for now. See <u>PIC.4.</u>

STEP 12 Install the four 10-24 fasteners through the covers and into the stand-off stud; loosely for now.

STEP 13 Retighten the heat shield clamp and wire clamp.


STEP 14 Ensure proper clearance and alignment of the cover then tighten the 1/4-20 and 10-24 button head cap screws.

Ride On!

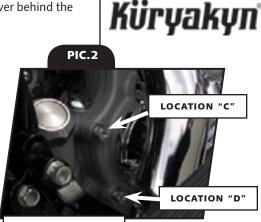

STAND-OFFS SHOWN ALREADY INSTALLED

PIC.3

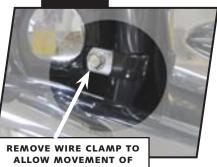



PAGE



