



## TRANSMISSION SHROUD FOR SOFTAIL 7878

**FITS: ALL '07-UP SOFTAIL MODELS**

### PARTS INCLUDED

- 1 Transmission Shroud – rear
- 1 Transmission Shroud – front
- 1 Hardware Kit including:
  - 2 Stand-Off Studs 5/16"-18 x 1-1/4"
  - 1 10-24 x .625 Button Head Cap Screw (BHCS)
  - 2 10-24 x .325 Button Head Cap Screw (BHCS)
  - 2 5/16" Flat Washers
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

### THANK YOU FOR CHOOSING KÜRYAKYN!

**WARNING!** YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

**ATTENTION!** Some applications will require loosening or removal of the exhaust for installation.

**NOTE** It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

### TOOLS SUGGESTED

Set of hex wrenches, combination wrench set or socket/ratchet set, torque wrench with hex bits/sockets.



### PROCEDURE

**STEP 1** Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine and exhaust system to cool.

**STEP 2** Remove the black plastic oil line clip and set aside.

**STEP 3** Remove the transmission side door fasteners shown in PIC.1 and PIC.2. These will not be re-used.

-cont-

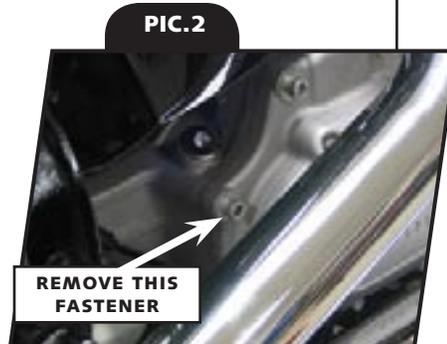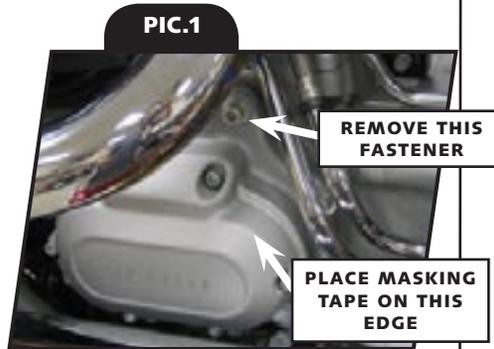

### CUSTOMER SERVICE

877.370.3604 (toll free)

### INSTALLATION QUESTIONS

techsupport@kuryakyn.com  
or call 715.247.2983

### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



**STEP 4** Install the included 5/16"-18 stand-off studs with flat washers; torque the stand-off studs to 13-18 ft. lbs (17.6-24.4 Nm).

**STEP 5** Slip the bottom end of the front cover behind the lower oil line (See [PIC.3](#)); you may need to push the oil line out of the way, be gentle.

**CAUTION!** Put a piece of masking tape in the location shown in [Pic. 1](#) to prevent scratching during installation.

**STEP 6** Slide the cover up and over the transmission side door fastener heads.

**STEP 7** The rear cover can now be set into place behind the stock exhaust pipe.

**STEP 8** Loosely connect the two covers with the 10-24 x .625 Button Head Cap Screw (See [PIC.4](#)).

**STEP 9** Install the two 10-24 x .375 Button Head Cap Screws into the stand-off studs; finger tight for now.

**STEP 10** Ensure that the covers are correctly aligned and evenly tighten the three 10-24 fasteners.

**STEP 11** Reinstall the black plastic oil line clip.

**STEP 12** Ensure proper clearance before operating the motorcycle.

*Ride On!*

**PIC.3**



**SLIP THE COVER BEHIND THE OIL LINE AND OVER THE TRANSMISSION SIDE DOOR**

**PIC.4**



**10-24 X .625  
BUTTON HEAD  
CAP SCREW**