



TEARDROP TIE DOWN BRACKETS 926

FITS: '86-UP FLST MODELS (EXCEPT FLSTS, FLSTSC AND FLSTSB)

PARTS INCLUDED

- 2 Teardrop Tie Down Brackets
1 Hardware Kit
4 5/16-24 x 3/4" Button Socket Cap Screws (BSCS)
2 5/16-24 x 1-1/4" Button Socket Cap Screws (BSCS)
2 5/16-24 x 1-3/4" Button Socket Cap Screws (BSCS)
8 5/16" Flat Washers
4 5/16" ID x 11/16" OD x 4MM Spacer
1 Anti-Seize Packet
1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Hex Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

CAUTION! See PIC 5 for correct bracket orientation. Mount the brackets so that the large portion of the opening is facing downward. Damage to the brackets will occur if mounted upside down.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

HERITAGE MODELS

STEP 2 Remove the two fasteners on the forks (only remove one side at a time); see PIC 1. The stock screws will not be reused.

STEP 3 Place the windshield mounting point assemblies between the forks and the Teardrop Brackets.

STEP 4 Place the Teardrop Brackets in place (PIC 2) over the holes and mounting point assemblies. In the top hole, secure using the 5/16-24 x 1-3/4" BSCS and 5/16" Flat Washer. In the bottom hole, secure using the 5/16-24 x 1-1/4" BSCS and 5/16" Flat Washer.

CUSTOMER SERVICE 877.370.3604 (toll free)

INSTALLATION QUESTIONS techsupport@kuryakyn.com or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
The product must be properly installed, maintained and operated under normal conditions.
Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today-select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



**NOTE** Due to manufacturing tolerances, it may be necessary to use more than one 5/16" Flat Washer on each fastener.

**ATTENTION!** Use the supplied anti-seize for any chrome-to-chrome fasteners; this will prevent galling and make future removal of fasteners easier.

**STEP 5** Tighten all fasteners. Be careful not to overtighten.

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

### DELUXE MODELS

**STEP 1** Remove the two fasteners on the forks (only remove one side at a time); see PIC 1. The stock screws will not be reused.

**STEP 2** Place the Teardrop Brackets in place (PIC 3) over the holes. Place the Chrome Spacers from the kit over the holes on the light bar between the light bar and the Teardrop Brackets. In the top hole, secure using the 5/16-24 x 1-3/4" BSCS and 5/16" Flat Washer. In the bottom hole, secure using the 5/16-24 x 1-1/4" BSCS and 5/16" Flat Washer.

**NOTE** Due to manufacturing tolerances, it may be necessary to use more than one 5/16" Flat Washer on each fastener.

**ATTENTION!** Use the supplied anti-seize for any chrome-to-chrome fasteners; this will prevent galling and make future removal of fasteners easier.

**STEP 3** Tighten all fasteners. Be careful not to overtighten.

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

### FAT BOY MODELS

**STEP 1** Remove the two fasteners on the forks (only remove one side at a time); see PIC 4. The stock screws will not be reused.

**STEP 2** Remove the filler panel from the forks and place the chrome spacers in place over the exposed holes. Place the Teardrop Brackets (PIC 5) over the chrome spacers and secure using the 5/16-24 x 3/4" BSCS and 5/16" Flat Washers.

**NOTE** Due to manufacturing tolerances, it may be necessary to use more than one 5/16" Flat Washer on each fastener.

**ATTENTION!** Use the supplied anti-seize for any chrome-to-chrome fasteners; this will prevent galling and make future removal of fasteners easier.


**STEP 3** Tighten all fasteners. Be careful not to overtighten.

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.


PIC. 1




PIC. 2

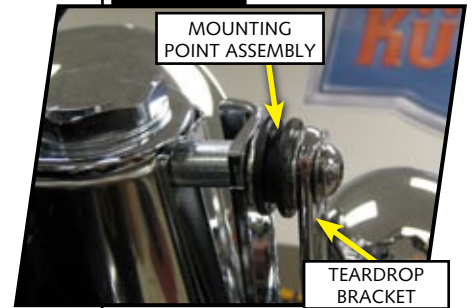

PIC. 3

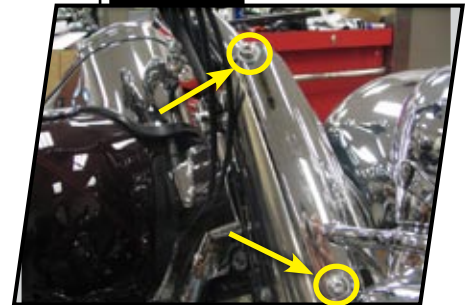

PIC. 4

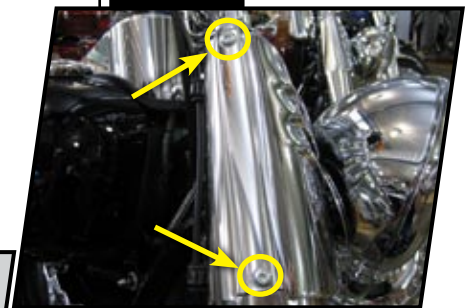

PIC. 5



*Ride On!*

PAGE

2