



MOUNTING SUGGESTIONS:


Harley-Davidson® FLT/FLHT 1980-1996 One-piece Sport Touring

Hardware:	1/4"-20 serrated nuts x 2 10-32 screws x 2 and steel bracket (1980-1988) If no handrail, part 78007 (not included)
Tools needed:	7/16" open-end wrench Phillips screwdriver (1980-1982)

Installation of Mustang Seat:

1. Remove serrated washers from the studs on the baseplate.
2. 1980-1982 – remove the screws holding the mounting bracket and reverse its position.
3. Engage seat mounting bracket with mount point on frame.
4. Firmly push seat forward so the nose meets the chrome dash panel.
5. Align studs with the holes in the stock handrail and fasten with supplied nuts.

Nose bracket for 1980-
1982 FLT

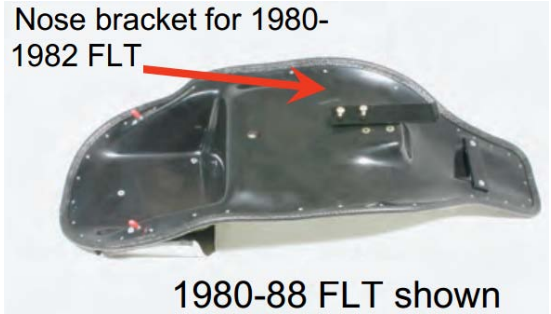

1980-88 FLT shown

Note: If installing without the stock handrail, you will need part 78007 to install the seat. Attach this to the fender mounts with the stock bolts before beginning installation.

Enjoy the comfort and custom look of your new Mustang seat!



These steps are guidelines to help you install your new Mustang product. If you need further assistance, please call us at 800-243-1392 or 413-668-1100, Monday through Friday 9:00 - 5:30 Eastern or send an e-mail to questions@mustangseats.com or visit our website at www.mustangseats.com.

For care and maintenance of our seats, please go to our website under "Support".

Refers to part numbers: 75047, 75235

**You are cordially invited to
— Tour the Mustang Factory —**

See how our craftspeople take pride in transforming raw materials into the world's highest quality, most comfortable handcrafted seats. Please contact Mustang for more information regarding tours of our historic Three Rivers, Massachusetts, facility (only 75 miles west of Boston; 150 miles northeast of New York City). Our two hour tours are by reservation only; we can accommodate groups from 2 to 24. We promise you will ride away with an entirely new awareness of what you put between you and your bike.