

## **MOUNTING SUGGESTIONS:**


Harley-Davidson<sup>®</sup>
Sportster 2003-prior
& 2010-up 2.1 gallon tank - Tank Bib

## Installation of Mustang tank bib:

- 1. Remove the seat from the motorcycle.
- 2. Remove the gas cap from the gas tank.
- 3. Place the Mustang tank bib on the tank and align it around the hole for the gas cap. Replace the gas cap to keep the bib stable during the next step.
- 4. Pull the leather straps at the front of the bib down around the frame, and tie into a knot.
- 5. Attach the lower end of the bib to the frame or the gas tank mount using the Velcro tabs.
- 6. Re-install the seat.



## Enjoy the custom look of your new Mustang tank bib!

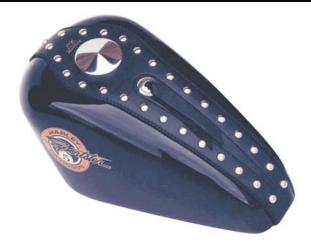

These steps are guidelines to help you install your new Mustang product. If you need further assistance, please call us at 800-243-1392 or 413-668-1100, Monday through Friday 9:00 - 5:30 Eastern or send an e-mail to questions@mustangseats.com or visit our website at www.mustangseats.com.

For care and maintenance of our seats, please go to our website under "Support".

Refers to part numbers: 93113, 93114, 93115, 93116, 93328, 93329

## You are cordially invited to Tour the Mustang Factory-

See how our craftspeople take pride in transforming raw materials into the world's highest quality, most comfortable handcrafted seats. Please contact Mustang for more information regarding tours of our historic Three Rivers, Massachusetts, facility (only 75 miles west of Boston; 150 miles northeast of New York City). Our two hour tours are by reservation only; we can accommodate groups from 2 to 24. We promise you will ride away with an entirely new awareness of what you put between you and your bike.